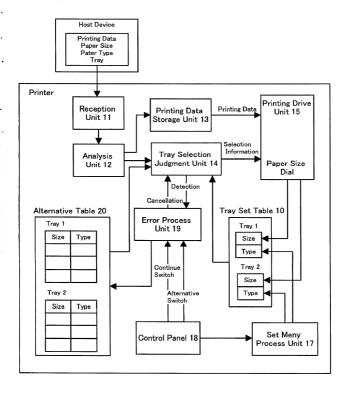


FIG. 2



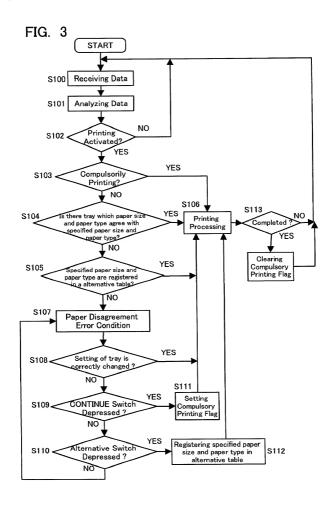


FIG. 4

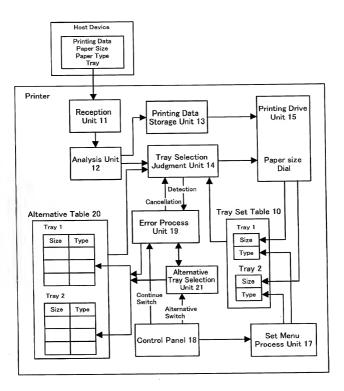


FIG. 5

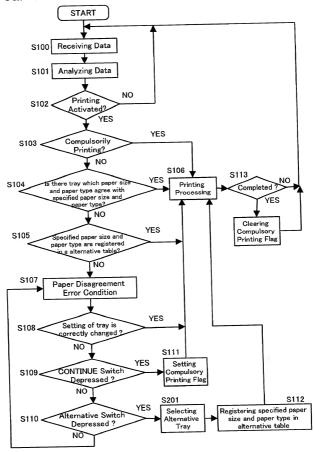


FIG. 6

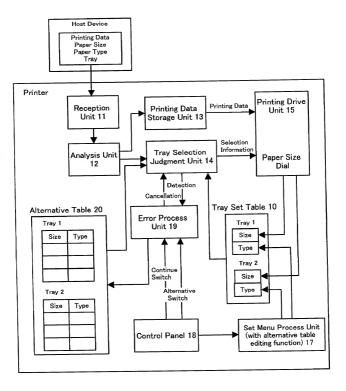


FIG. 7


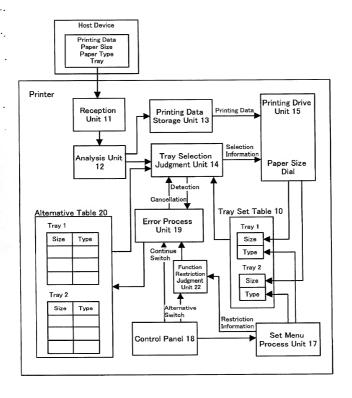


FIG. 8

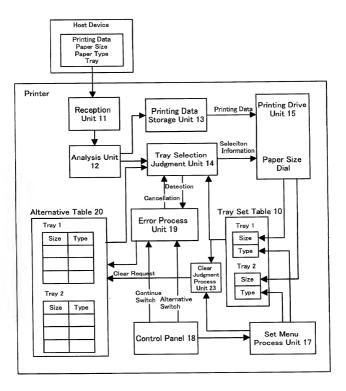

OGTHDBZ3.122100

FIG. 9

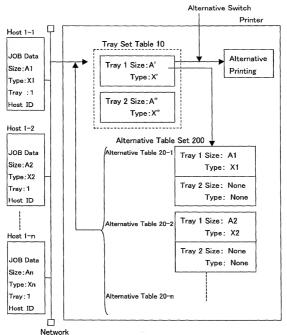


FIG. 10

÷,

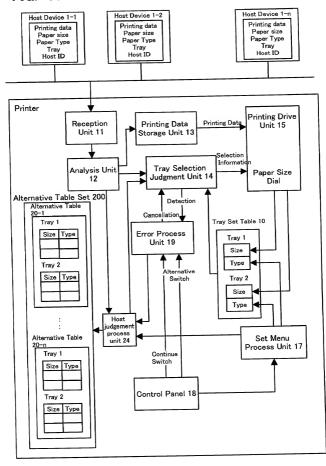


FIG. 11

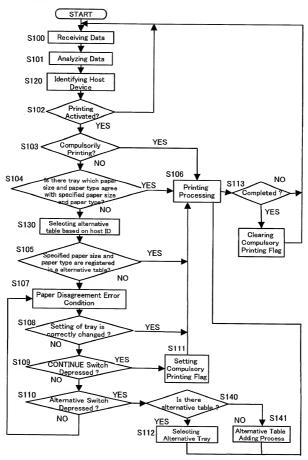


FIG. 12

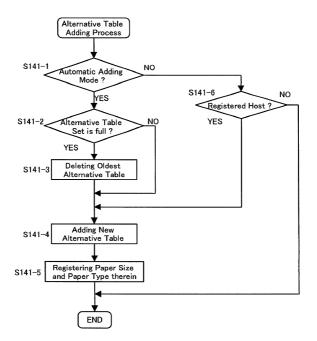


FIG. 13

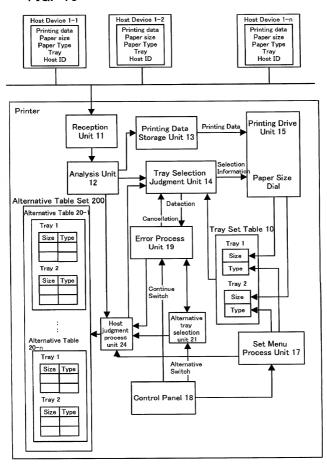


FIG. 14

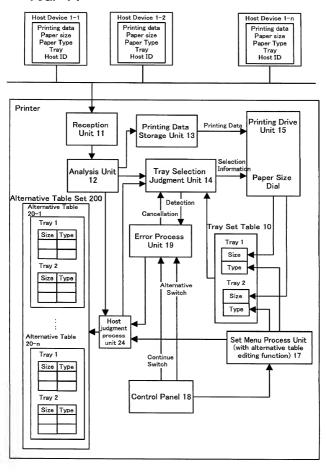


FIG. 15

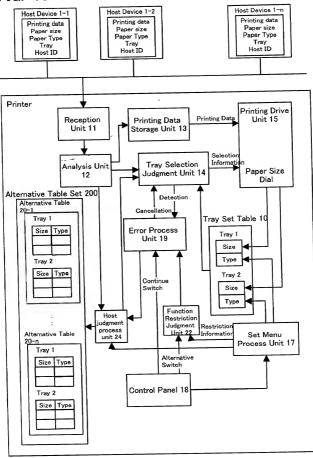


FIG. 16

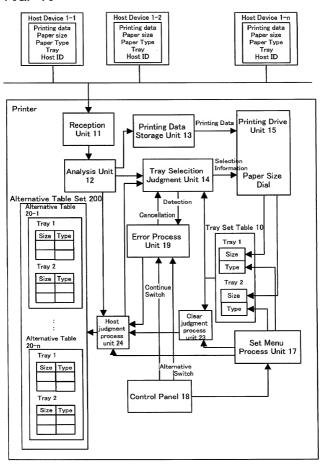


FIG. 17

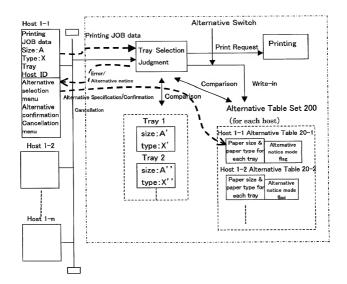


FIG. 18A

□Menu Window	
Information:	
Warning : Substitute Printing Print from tray 1 (A41 Plain) for Letter Plain	
OK Cancel	

FIG. 18B

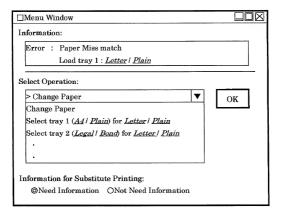


FIG. 19

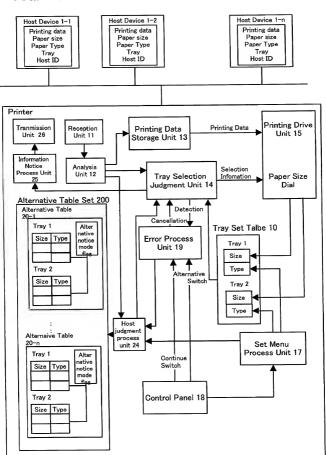


FIG. 20

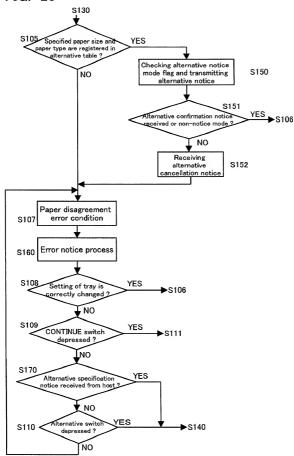


FIG. 21

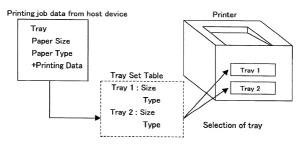


FIG. 22A

Changing paper in tray




FIG. 22B

Compulsory printing by CONTINUE switch

